

# **USAAlert**

## OWNERS MANUAL






[www.usalertllc.com](http://www.usalertllc.com)


### ICONS

- |   |                   |   |                                |
|---|-------------------|---|--------------------------------|
|  | Vibrate Alert     |  | Message Locked                 |
|  | Beeping Alert     |  | Out Of Range Indicator         |
|  | Daily Alarm ON    |  | Low Battery Indicator          |
|  | Duplicate Message |  | Message continues on next page |
|  | Unread Message    |   |                                |




### FUNCTION KEYS

-  Message **READ** Key
-  **ESCAPE** (back to previous menu)
-  **MENU** Key

## Getting Started




**Power On** – Insert AAA battery and press  **READ Key** for 2 seconds to turn the pager on.




**Power Off** – Go to the **STANDBY SCREEN**. Press the  **MENU Key** to display the **SETTINGS Menu**. Use the  **MENU Key** to scroll through the menu until **PAGER OFF** is found. Press the  **READ Key** to confirm your choice.


**Backlight** – Press and hold the  **READ Key** to activate or deactivate.

## Read Messages


The pager will display a new message when it is received. To read stored messages, press the  **READ Key** from the **STANDBY SCREEN**. Scroll through messages with the  **READ Key**. You will be returned to the **STANDBY SCREEN** automatically if you scroll to the end of the message queue. If a message is longer than the screen width, the  **READ Key** is used to view the rest of the message.


## Delete Messages

While message is displayed – Press the  **MENU Key** to view the **DELETE MENU** Screen.







Using the  **MENU Key**, select between **PROTECT** (locks current message), **DELETE** (deletes current message) or **DELETE ALL** (deletes all stored messages).


Select **PROTECT** (locks current message) to prevent the current message from being deleted.

Press the  **READ Key** to confirm your selection.

The  **ESCAPE Key** takes you back to the **STANDBY SCREEN**.

## Settings Menu

Press the  **MENU Key** to select the **SETTINGS Menu**. Scroll through the menu by pressing the  **MENU Key**. Press the  **READ Key** to confirm your selection. Use the  **MENU Key** to modify options. Use the  **READ Key** to move to the next option. To save changes and return to the **STANDBY SCREEN**, press the  **READ Key** until the end of the line is reached.

The  **ESCAPE Key** takes you back to the **STANDBY SCREEN** without saving changes.