












## THE ALPHA 2 PAGER PROGRAMMING MENU






Escape	Left	Right	Read
Key	Key	Key	Key

- Turn the pager off by holding the  *Escape Key*.
- Using the  &  *Arrow Keys*, scroll through the various settings until  *POWER OFF* is found.
- Press the  *Read Key* to select this menu item. Confirm selection by pressing the  *Read Key* again. The pager will then turn off.
- Before attempting to enter the Alpha 2 pagers programming menu, the pagers CPU must be reset. This is achieved by removing the battery and inserting it the wrong way around for about two seconds.
- Now remove the battery and hold down the  *Read Key* while inserting the battery the correct way around this time. The pager will display *MNL PROGRAM*. Press the  *Read Key* to proceed.



**MNL PROGRAM**

- You *may* be prompted for a four digit numeric password if this feature has been enabled in the programming software. Use the  *Arrow Key* to change fields and the  *Read Key* to move along to the next field. After the correct digits are entered, press the  *Read Key* to proceed to the programming menu. By default this password is 0200.
- Once you are in the programming menu, you will see the first cap code ready for viewing or editing. There are six cap codes available in total.







**ID1 ON 000008**

- If you do not need to edit the six cap codes, you can press the  *Arrow Key* while the ID number is flashing, to scroll through without changing them.
- Alternatively if you wish to edit the cap codes, Use the  *Arrow Key* to change fields and the  *Read Key* to move along to the next field.
- Each cap code can be enabled or disabled if required. This is what the *ON* or *OF* field just before the cap code digits refer too.
- After the sixth cap code has been edited, the next section is baud rate.


**BAUD: 1200**

- Use the  *Arrow Key* to toggle between 512, 1200 & 2400 bps. This setting must match that of your paging system. Press the  *Read Key* when ready to proceed to the next section.
- After editing the baud rate, the next section is the frequency.

**FRE 450.3250**

- Press the  *Arrow Key* to change fields and the  *Read Key* to move along to the next field. This setting must match that of your paging system. Press the  *Read Key* until the cursor reaches the end of the line, where you will move along to the next section.
- The last section asks you to confirm that all entered settings are correct before writing the settings to the pager. If everything is correct, press the  *Read Key*, otherwise press the  *Arrow Key* to go back to the cap code screen to make more changes.
- To exit the programming menu at any time, press the  *Escape Key*.

**FPROGRAM YES?**

- Once the settings are written to the pager, it will turn off. Wait a few seconds, then you can press and hold the  *Read Key* to turn the pager on. The pager will then resume normal operation with the newly programmed settings.